

Part No. 85073EX
Revised: June 2004

EXPORT FENCE GRILLS

Instruction Manual
Models #8160EX AND #8161EX





 **GOLD MEDAL**®

FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock. Do NOT immerse this unit in water. Do not use excessive water when cleaning. Always unplug the equipment before cleaning, or servicing.</p>

	⚠ WARNING
	<p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into a receptacle.</p>

	⚠ WARNING
	<p>Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.</p>

	⚠ WARNING
	<p>NEVER put your fingers or any object into the heating area. We do NOT assume any liability for injury due to careless handling or operation of this equipment.</p>

	⚠ CAUTION
	<p>This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.</p>

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

FENCE GRILL INSTALLATION


CHECKING SHIPMENT

Unpack the shipping crate and check thoroughly for any damage which may have occurred in transit. Any claims should be filed immediately with the transportation company.


ELECTRICAL REQUIREMENTS

Voltage for your grill is 240 Volt, 50 Cycle, single phase. The 8160EX will draw a maximum of 6.3 amps and the 8161EX a maximum of 7.3 amps. Your electrician must furnish sufficient current for the proper operation of your machine. We recommend that this machine be installed on a dedicated line.

NOTE: These instructions apply to all machines manufactured after 6/11/2004.

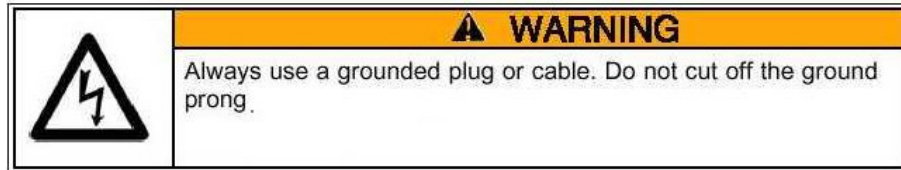

OPERATING INSTRUCTIONS

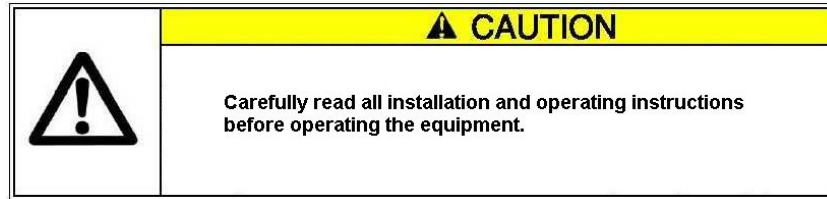

CONTROLS AND THEIR FUNCTIONS

HEAT CONTROLS

(2) Heat controls to cover the upper and lower zones. These controls have a positive OFF and are variable from low to high.

ON/OFF SWITCH

Provides power to the motor and the heat controls with a built in pilot light to indicate that there is power to the unit.

EASY STEPS FOR USING UNIT

1. Wipe grill clean prior to operation by using a damp washcloth.
2. Place fence on grill by aligning the pins on the grill with the slots in the fence.
3. Turn the on / off switch on. Turn heat controls fully clock-wise to high position.
4. Pre-heat grill for 15 minutes.
5. Place pre-cooked product on grill between the fence rails.
6. Cook for 20-30 minutes and check product temperature with thermometer provided. (Should be 150 Degrees F.) Adjust heat as necessary to raise the temperature of the food to 150 degrees Fahrenheit.
7. Carefully remove and serve product.


CARE AND CLEANING

The stainless steel body of the Fence Grill is easy to keep clean. Usually a damp cloth will remove all dirt and grease spots. NEVER USE ABRASIVES on the stainless steel body, cooking surface, or fence.

Cleaning Procedure:


Turn Fence Grill off and allow to cool for at least 2 hours before starting the cleaning procedure.


1. Unplug grill
2. Take fence off of cooking surface. Clean fence with soap and water.
3. Empty drip pan.
4. Wash drip pan as necessary with soap and water.
5. Clean stainless steel portion of unit with damp cloth and dry.
6. Clean cook top and fence with Watchdog Concession Equipment Cleaner. (Gold Medal Item #2580)

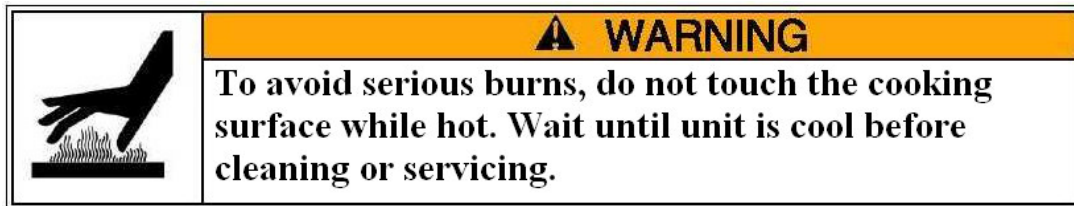

MAINTENANCE INSTRUCTIONS

	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse in water. Always unplug the equipment before cleaning or servicing.

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

ORDERING SPARE PARTS

1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.


Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807


or, place orders at:

(513) 769-7676
(800) 543-0862
Fax: (513) 769-8500
E-Mail – info@gmpopcorn.com


Parts Breakdown – Top View

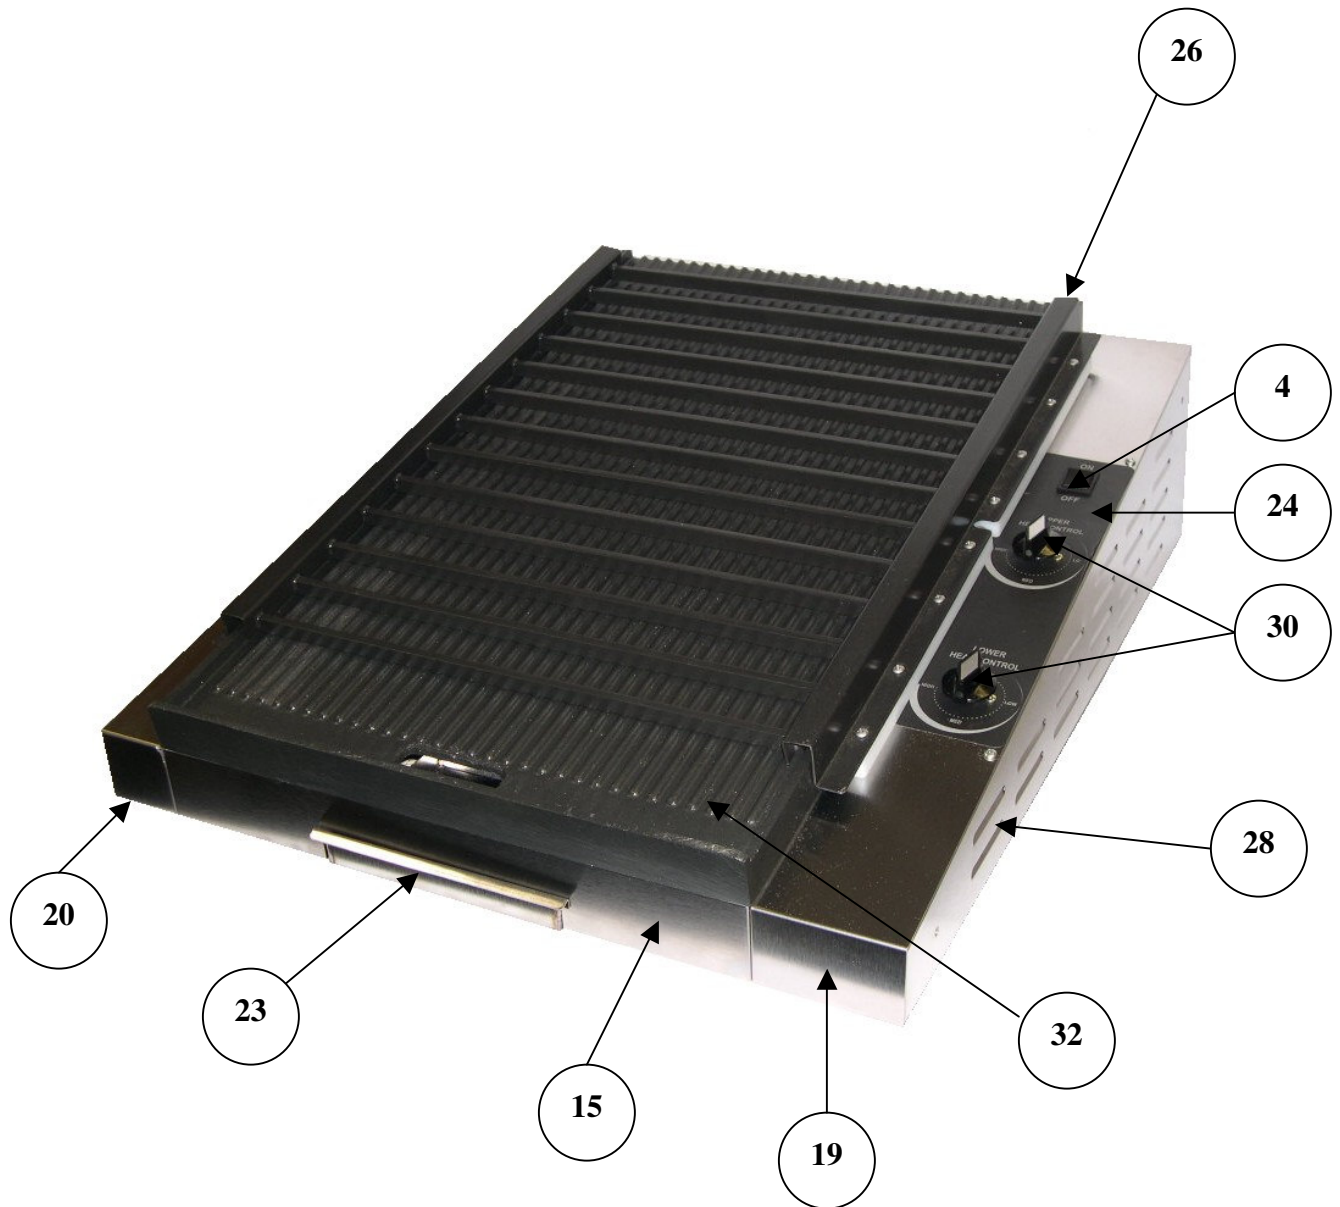


Parts Breakdown – Side View

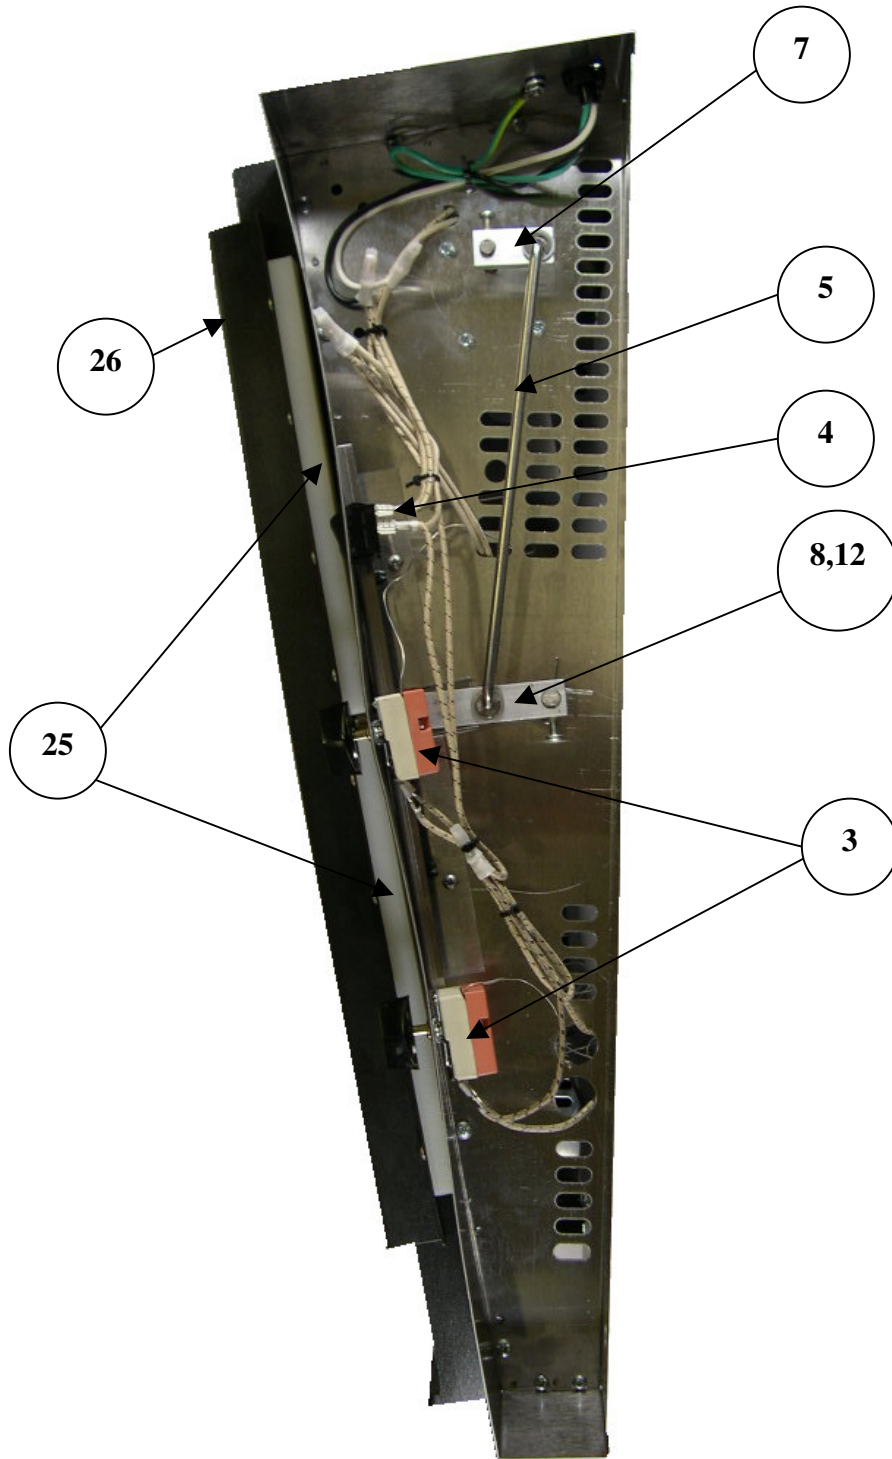

Parts Breakdown – Bottom View

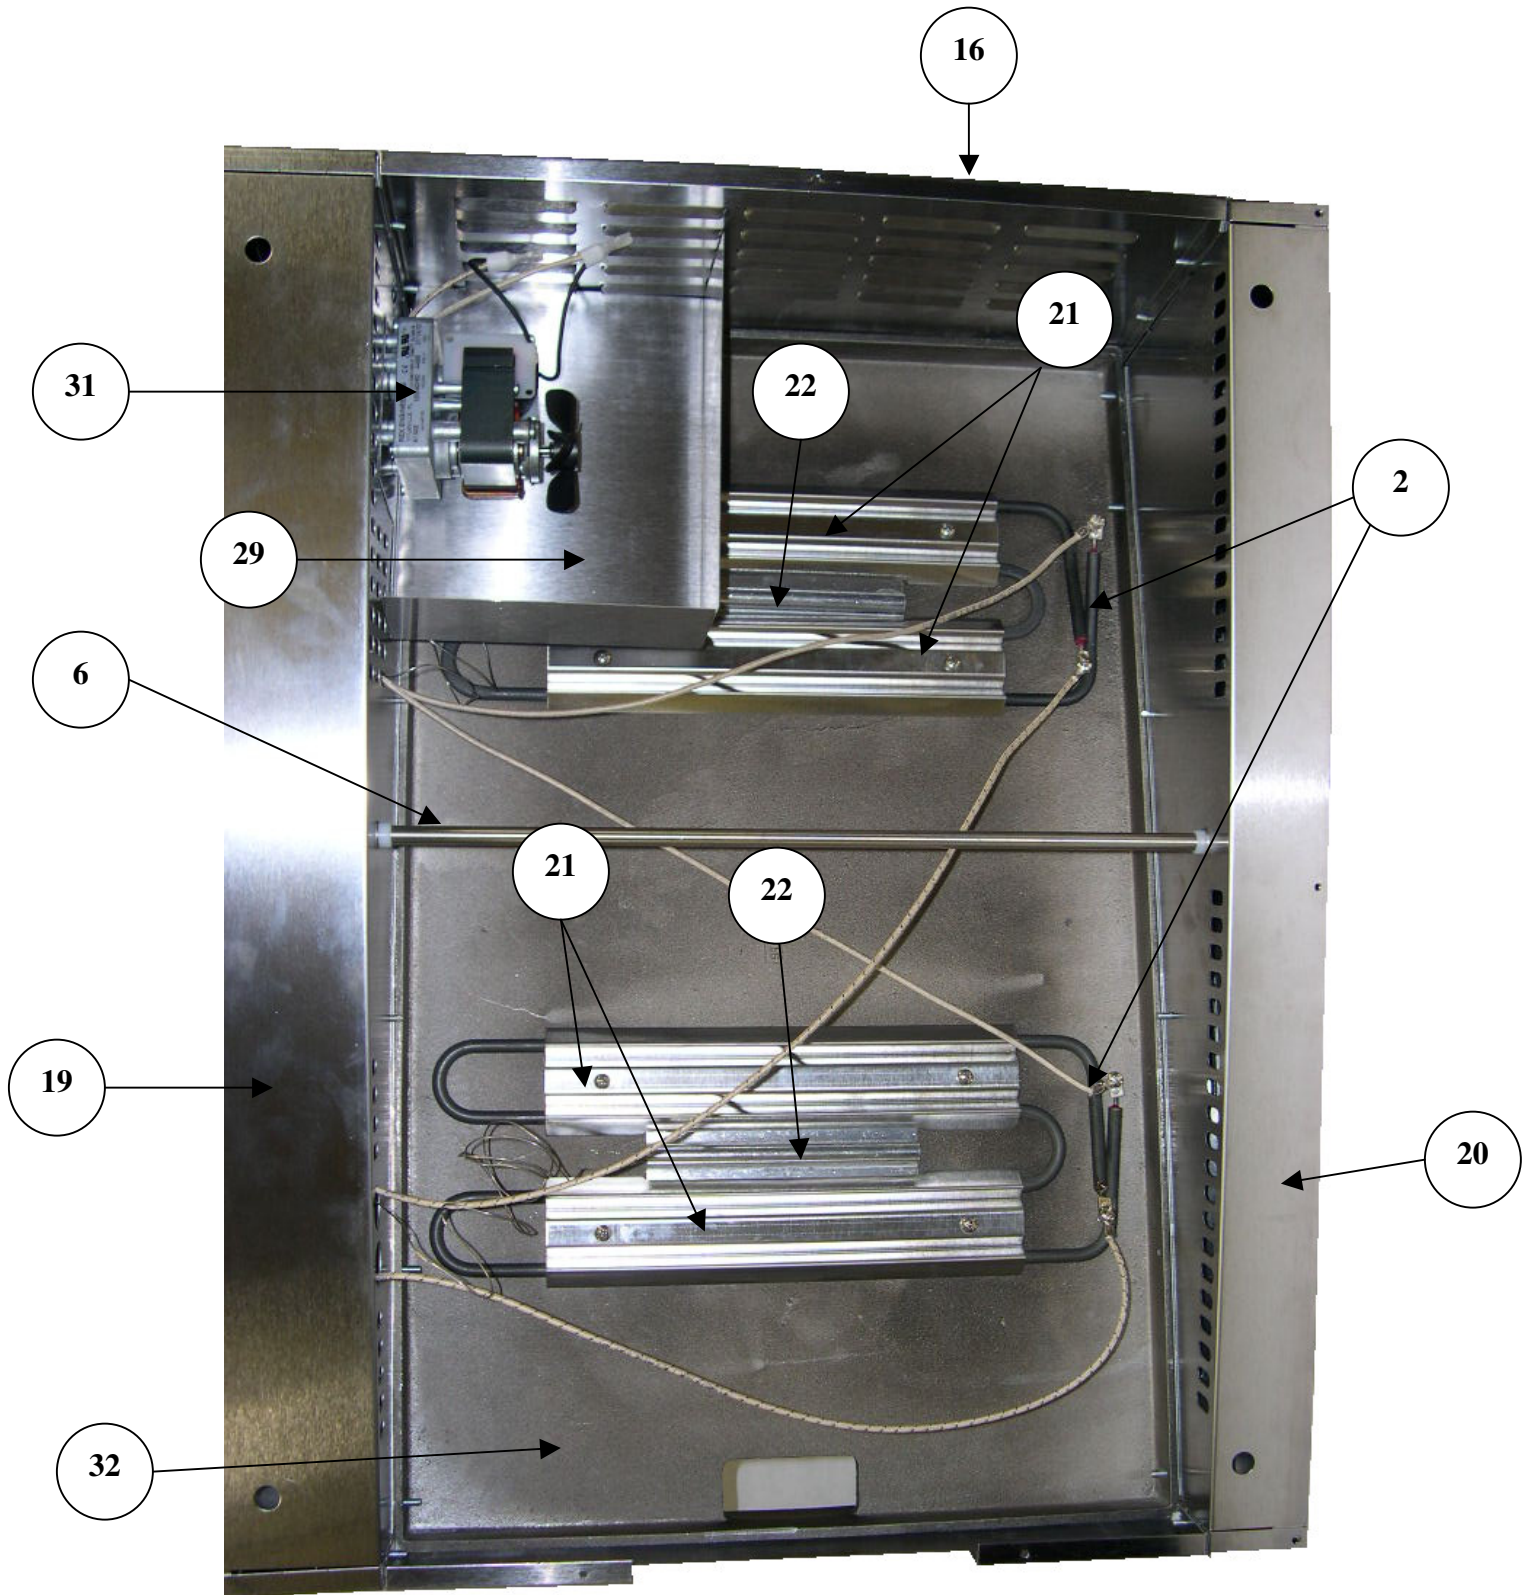

Bottom Plate Assembly

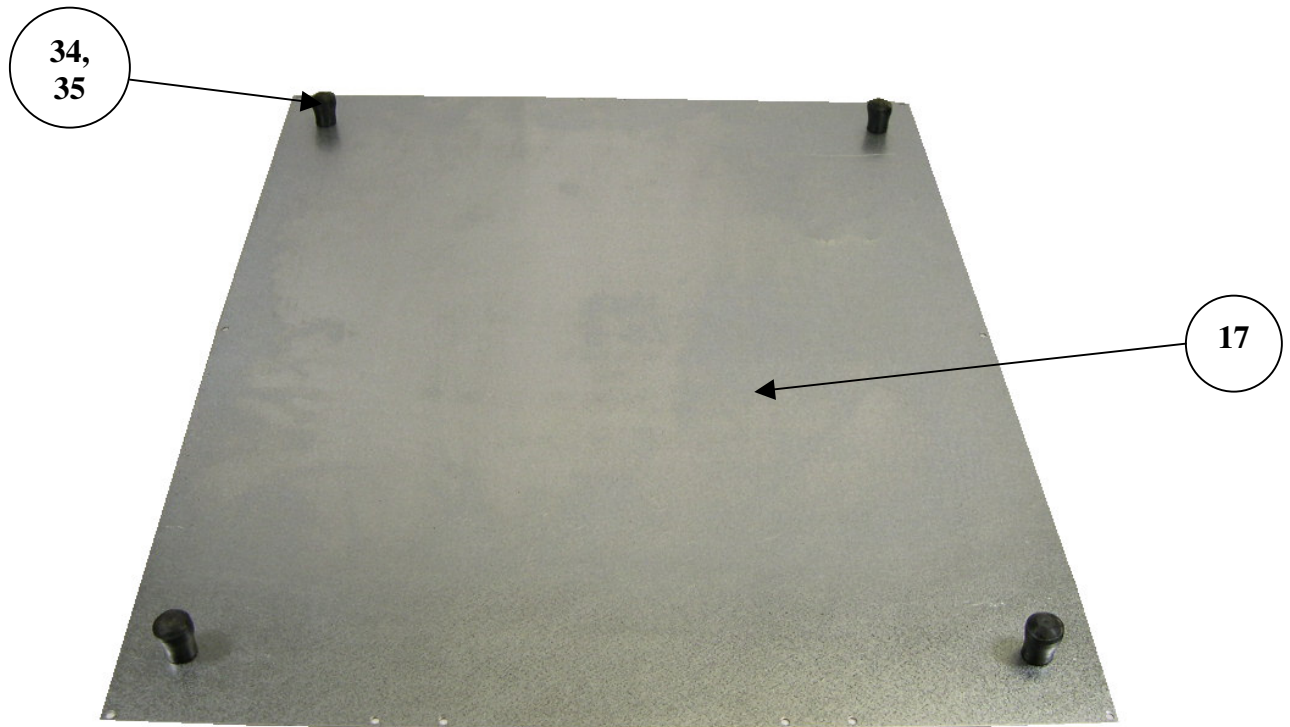


PARTS LIST – FENCE GRILL

Model # 8160EX		8161EX			
Item No.	Part No.	Part No.		Description	Quantity
1	42369	42369	*	Lead-in Cord	1
2	85001EX			Oven Heat Element 700 Watt	2
2		85036EX	*	Oven Heat Element 785 Watt	2
3	85002	85002		Heat Control	2
4	42798	42798		ON / OFF Switch	1
5	85003	85003		Main Link	1
6	85004	85037		Drive Bar	1
7	85005	85005		Motor Link	1
8	85006	85006		Pivot Link	1
9	85007	85007		E-Clip (Holds Above 2 Items On)	4
10	85008	85008	*	Flanged Bushing	2
11	85009	85009	*	Snap- In Bushing	2
12	85010	85010		Drive Wheel	2
13	85011	85011	*	Glide Buttons	8
14	85013	85013	*	Outer Slide	2
15	85018	85038		Front Plate	1
16	85019	85039		Rear Plate	1
17	85020	85048		Bottom Cover	1
18	85024	85024	*	Inner Slide Weldment	2
19	85025	85025		Right Side Weldment	1
20	85026	85026		Left Side Weldment	1
21	85027	85027		Element Clamps	4
22	85028	85028		Bulb Cover	2
23	85029	85041		Drip Pan	1
24	85049	85049		Control Label	1
25	85051	85051		Fence Glide	4
26	85053	85071		Fence Weldment	1
27	85058	85058		Left Side Weldment	1
28	85059	85059		Right Side Weldment	1
29	85060	85060		Motor Shield	1
30	87049	87049		Knob, Heat Controls	2
31	87532EX	87532EX		Motor, 120v , ccw	1
32	85000	85035		Cook Plate	1
33		85040	*	Small Element Clamps	4
34	47328	47328		Glide	4
35	49123	49123		Crutch Tip	4

* Not Shown

Electrical Schematic

Model 8160EX & 8161EX

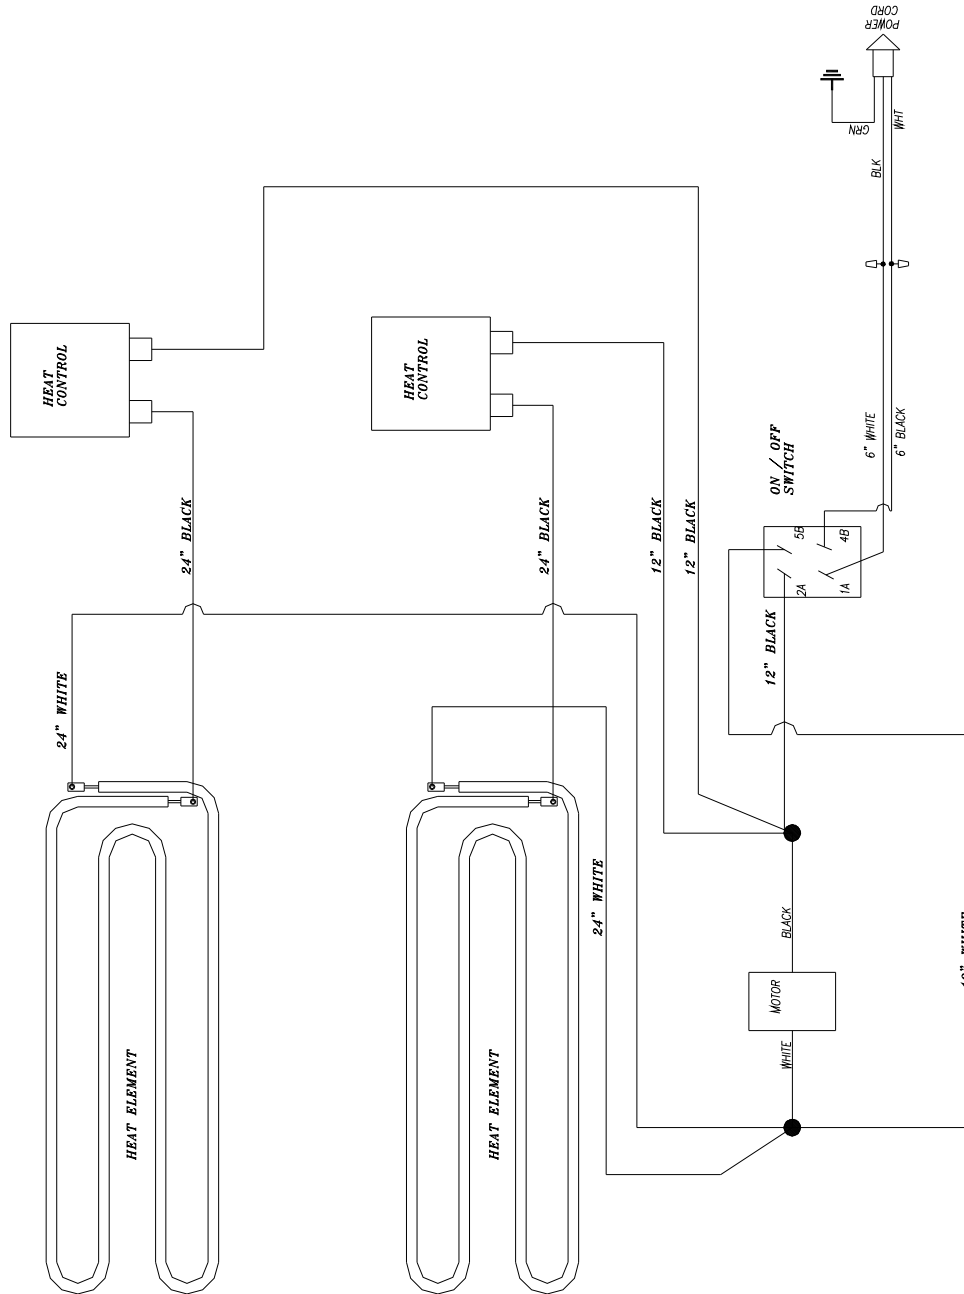

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496